


Remote Control Setting

Button

Remarks

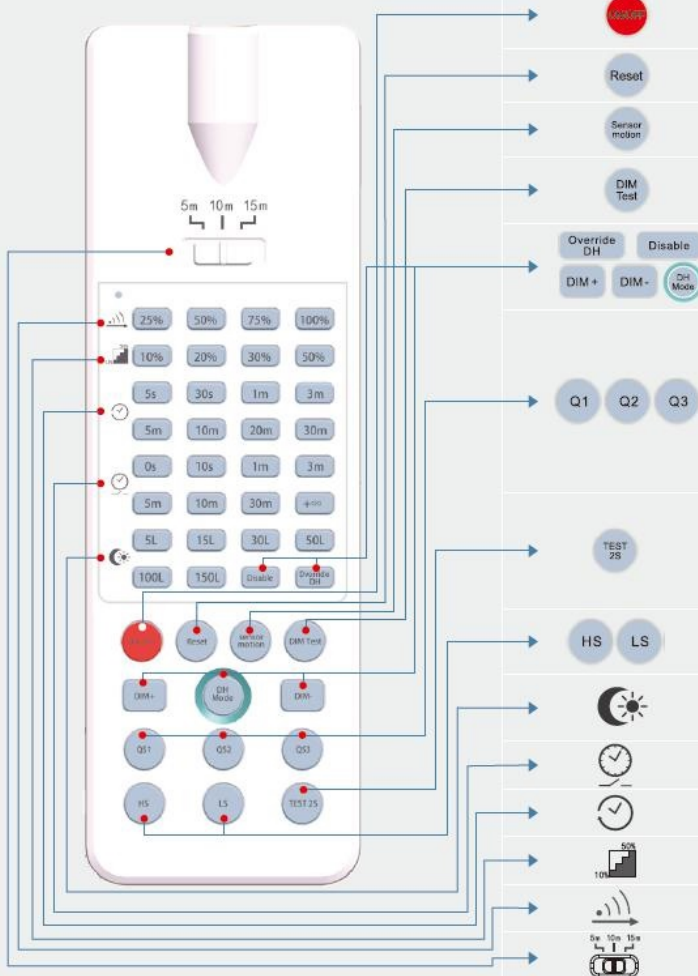

Press the "ON/OFF" button, the light goes to constant on/off mode, sensor is disabled. Press "Reset" "Sensor motion" button to quit from this mode and the sensor starts to work.



Press "Reset" button, all parameters are same as setting of factory settings.



Press "Sensor motion" button, the light quits from the constant on/ off mode, and the sensor starts to work (The latest setting stays in validity)



Press "DIM Test" button, the 1-10 V dimming works to test whether the 1-10Vdc dimming ports are connected properly. After 2s, it returns to the latest setting automatically.



"Override DH", and "DH Mode" that the two functions are not applicable for MC054V RC2.



Scene Options	Detection Area	Hold Time	Stand-by period	Stand-by dim level	Daylight Sensor	Sensitivity model
Q1	100%	5min	10min	10%	30Lux	Hs
Q2	100%	10min	30min	10%	Disable	Hs
Q3	100%	20min	30min	10%	Disable	Hs

Note: Detection area / Hold time /Stand-by period /Stand-by dim level / Daylight sensor can be adjusted by pressing the corresponding button. The latest setting will stay valid.



Press the "TEST 2S" button can enter the test mode any time. At the mode, the sensor parameters as below: Detection Area is 100%, Hold Time is 5s, Stand-by Dim Level is 10%, Stand-by Period is 0s, daylight sensor disable. This function only for testing. Quit the mode by pressing "RESET" or any other function buttons.



Press "HS" button to set the detection area to be high sensitive. Press "LS" button to set the detection area to be low sensitive. The adjustment bases on the "Detection Area" parameter you set.



Daylight Sensor
Set up daylight threshold:
5Lux/15Lux/30Lux/50Lux/100Lux/150Lux/ Disable.



Stand-by period
Set up stand-by time: 0S/10S/1min/3min/5min/10min/30min/+∞



Hold time
Set up hold time: 5S/30S/1min/3min/5min/10min/20min/30min



Stand-by dim level
Set up stand-by dim level: 10%/20%/30%/50%



Detection Area
Set up detection area: 25%/50%/75%/100%



Remote Distance
Toggle button can set the remote distance of remote control and sensor.