 




**7Kg AUTO SENSING
VENTED CLOTHES DRYER**

USER'S MANUAL

Model : TCD70ASA

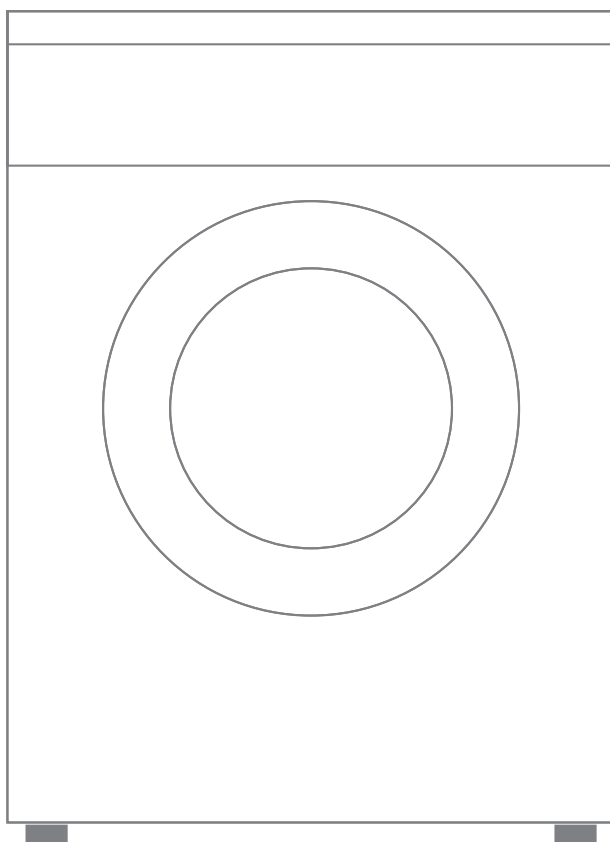

To ensure proper use and your safety, please read the following user manual completely before operating this appliance. Please keep this manual in a safe place for future reference.

Congratulations and thank you for purchasing a TECO product and for placing your confidence in us.

- All images and diagrams contained within this manual are for illustration purposes only.

SAFETY PRECAUTIONS

Warning - To reduce the risk of fire, electric shock, or personal injuries, the following basic precautions should be followed.

- Read all instructions before using this dryer.
- The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer in such a way that a full opening of the tumble dryer is restricted.
- **WARNING** : Rear panel can be hot.
- The tumble dryer should not be used if industrial chemicals have been used to
- The dryer must only be used for its intended purpose.
- **WARNING** : Regularly clean the lint filter.
- This appliance is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Young children should be supervised to ensure that they do not play with the appliance.
- Do not operate the dryer if any parts are missing or broken.
- To avoid fire hazard or electrical shock do not use an adaptor plug or extension cord or remove grounding prong from electrical power cord. Failure to follow this warning can cause serious injury, fire or death.
- To avoid fire hazard or electrical shock do not reach into the drum while the drum is moving. Wait until the dryer has stopped completely before reaching into the drum.
- Do not attempt to modify or repair the controls.
- The final part of a tumble dryer cycle occurs without heat (cool down cycle) to cool items to a temperature that ensures that they will not be damaged.
- Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- Do not dry items that have been previously cleaned in, washed in, soaked in, or spotted with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers, etc. Do not store or use these items on or in the vicinity of the dryer. Do not place items exposed to cooking oils in your dryer. Items contaminated with cooking oils may contribute to a chemical reaction that could cause a load to catch fire.
- Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and create a fire hazard.
- If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer, they should first be washed in hot water with extra detergent - this will reduce, but not eliminate, the hazard.
- Do not dry unwashed items in the tumble dryer.
- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
- Do not use heat to dry items containing plastic, foam rubber or similarly textured rubber-like materials, or items containing feathers or down. Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- This dryer must be properly installed in accordance with the installation instructions on Page 6 before it is used.
- Do not install or store this dryer where it will be exposed to water and/or the weather. Keep surrounding areas free from the accumulation of lint, dust and dirt.
- To prevent shock hazard and assure stability during operation, the dryer must be installed and electrically grounded by a qualified service person in accordance with local codes.

- Do not sit on top of the dryer.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Always disconnect dryer from electrical supply before attempting any service.
- Disconnect power cord by grasping the plug, not the cord. Do not repair or replace any part of the dryer or attempt any servicing unless specifically recommended in the user-maintenance instructions.
- Remove all objects from pockets such as lighters and matches.

Safety of children

Packaging (e.g. wraps, polystyrene, etc.) can be dangerous for children. There is a risk of suffocation. Keep packaging materials away from children. Remember to dispose of old appliances in accordance with local laws. Pull out the mains plug, cut off the mains cable, break or remove spring or bolt catches if fixed and ensure that children cannot lock themselves in the appliance when playing (there is risk of suffocation) or involve themselves in other dangers, for children cannot recognize the hazard present in household appliances themselves. Therefore, it is very important for parents to make adequate supervision and never let children play with the appliance.



WARNING

WARNING ICON

This symbol indicates information concerning your personal safety



CAUTION

CAUTION ICON

This symbol indicates information on how to avoid damaging the appliance



FIRE HAZARD ICON

This symbol indicates risk of fire. Failure to follow the warnings outlined in this user manual can cause a fire hazard.




HOT SURFACE

Do not touch the rear panel during the drying cycle due to high temperatures.

TABLE OF CONTENTS

Safety Precautions	2 - 3
Table Of Contents	4
Identifying Dryer Parts	5
Installation	5 - 6
Before First Use & Drying Tips	6
Control Panel	7
Operating Instructions	7 - 8
Program Information Table	8
Cleaning & Maintenance	9
Troubleshooting	10
Repairs, Service & Warranty	11
Specifications	12

IDENTIFYING DRYER PARTS

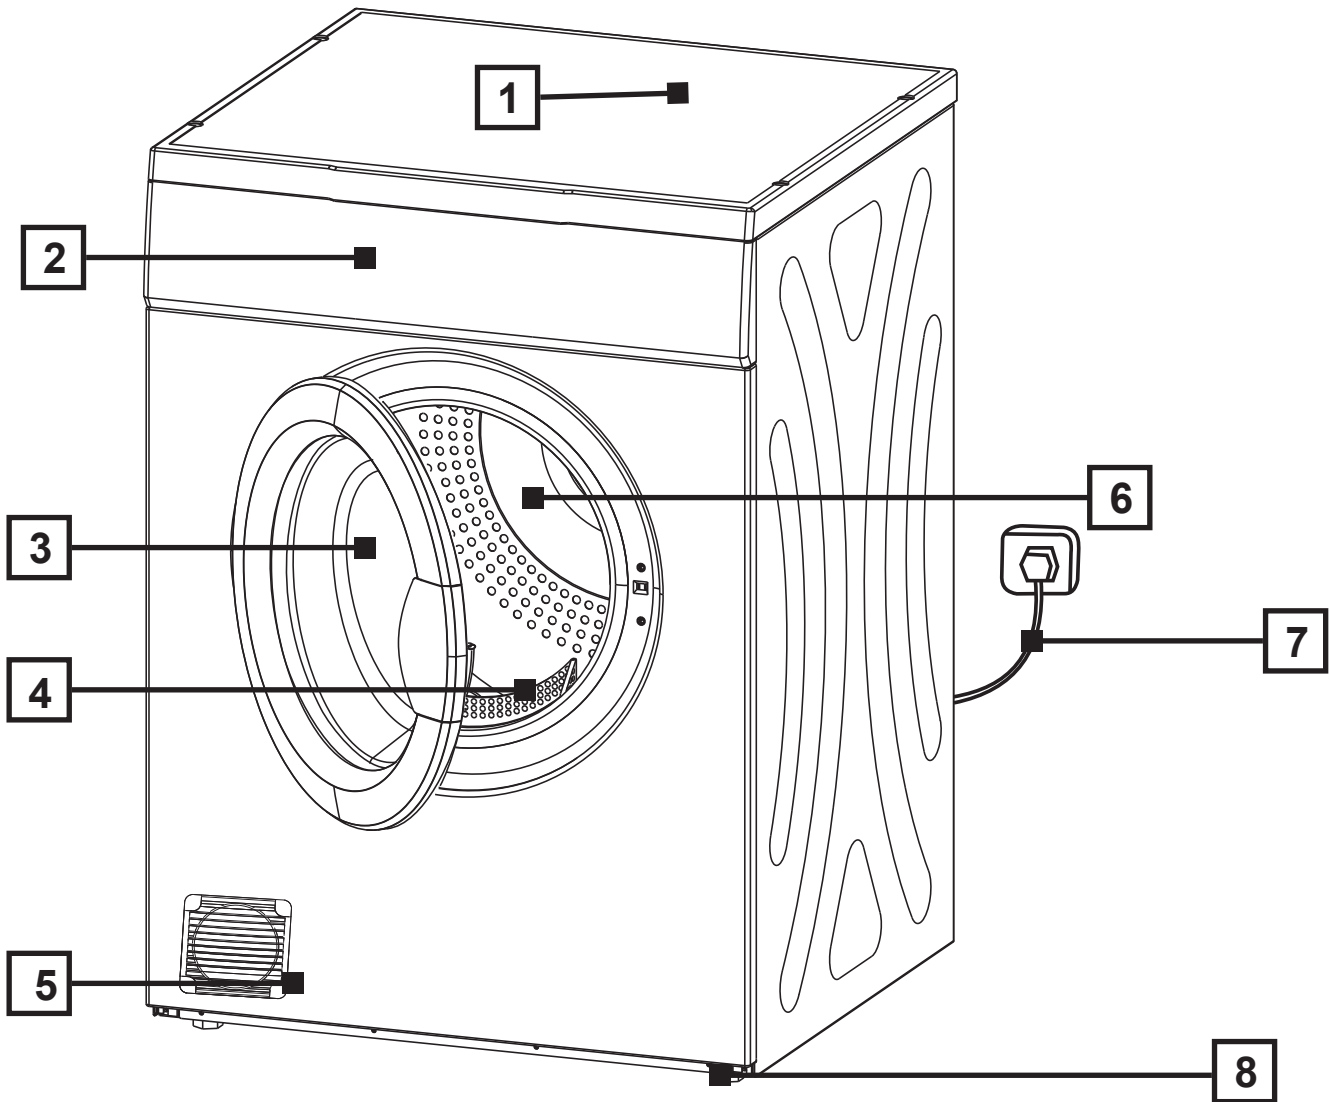

1 - Cabinet

3 - Door

5 - Air Vent

7 - Power Cord

2 - Control Panel

4 - Lint Filter

6 - Drum

8 - Adjustable Feet


INSTALLATION

Please install your clothes dryer according to the instructions below for correct operation, optimal performance and safety.

STEP 1 : Choosing a location

When choosing a location for your clothes dryer, consider the following:

1. Indoor use only.
2. A location that is dry and free of moisture.
3. A location that is well ventilated.
4. A location with at least 100mm clearance on all sides and back.
5. A location that is not in direct sunlight.
6. A location that is structurally sound, completely level and stable.

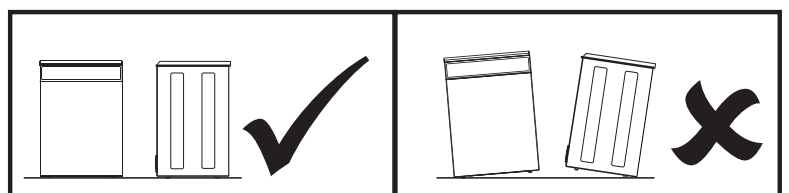

STEP 2 : Connect the Power

1. Connect the power plug to the mains power outlet.
2. Switch mains power to ON.

Note: Do not connect the clothes dryer to an extension cord or multiple power board.




WARNING: Never operate electrical equipment with wet hands to avoid injury, electric shock or damage to the appliance.

BEFORE FIRST USE

During manufacturing or transport, dust and grease may remain in the dryer drum. Before use, please perform the following maintenance:

1. Place some clean rags into the dryer drum.
2. Plug in the power cord to the mains power.
3. Select the “Quick” program and press the “Start/Pause” button.
4. Once the program is complete, please refer to and follow the maintenance procedure to clean the lint filter on **Pages 9 & 10**.

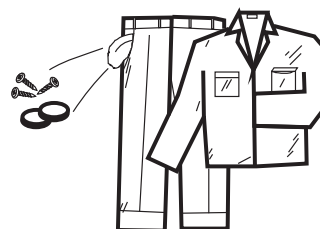


DRYING TIPS:

For optimal performance and results from your clothes dryer, please refer to the points below.

- Before placing items in the dryer, place them through a spin cycle in a washing machine. This will assist in removing excess water and moisture. choosing a high spin speed can assist in reducing drying time and energy consumption.
- To achieve consistent and uniform drying results, sort the items to be dried by fabric type.
- Select a program best suited for the fabric type of the items to be dried.
- Remove all items from pockets and do up buttons and zippers of each item before placing inside the dryer to avoid damage to the dryer and items.
- Avoid over drying items. Over drying items can increase the chance of creases and may cause items to shrink. Check tags attached to items for correct drying instructions.
- Do not attempt to dry fabrics that contain latex or rubber material.
- Avoid touching or opening the door during a program as it may be hot.
- Clean the lint filter after each use. Doing so will maintain drying efficiency.

CONTROL PANEL

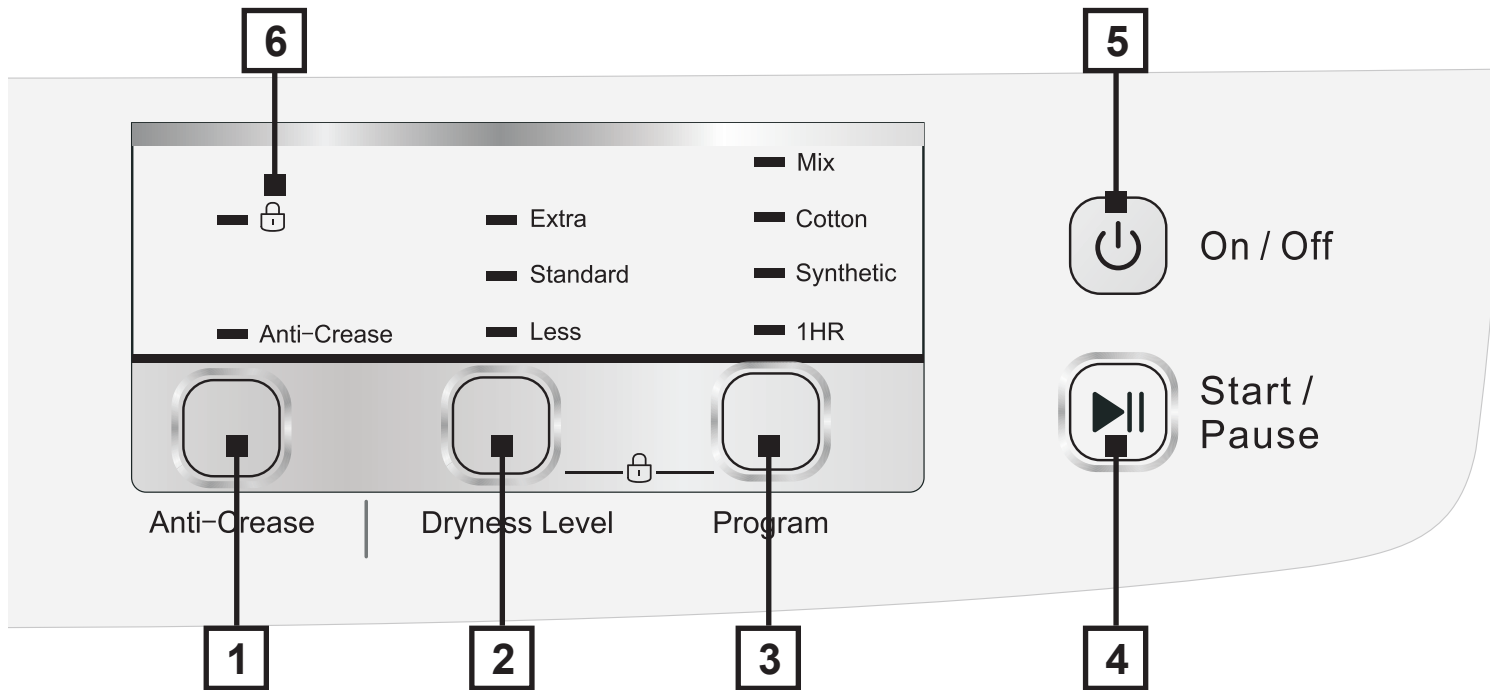

1 - Anti-Crease Button

2 - Dryness Selection Button

3 - Program Selection Button

4 - Start/Pause Button

5 - On/Off Button

6 - Child Lock Indicator

OPERATING INSTRUCTIONS

STEP 1 :

Before placing items into the dryer, ensure the power cord is securely plugged into the mains power source and switched on (refer to the installation instructions on **Pages 6 & 7**).

Load the items to be dried into the dryer (Max. load 7.0Kg).

STEP 2 : Program Selector

After loading in the items to be dried, close the dryer door securely.

Press the Program Selector Button to the desired program. Refer to page 9 for details.

STEP 3 : Dryness Selector

Press the Dryness Selection Button to select from Extra, Standard or Less. Extra is the hottest setting, Standard is normal heat setting and Less is the coldest setting.

STEP 4 : Additional Functions

If required, press the Anti-Crease Button and then start the program by pressing the Start/Pause button. See **OPTIONAL FUNCTIONS** (Page 9) for more information.

STEP 5 : Remove Items

Once the selected program is finished, a buzzer will sound. Press the On/Off Button and disconnect the dryer from the power source.



Be careful removing items from the dryer as the cabinet, door and items may be hot. Remember to clean the lint filter after each use.

OPTIONAL FUNCTIONS

Anti-Crease : The Anti-Crease function starts at the end of the drying cycle and intermittently rotates the drum to prevent creasing to sensitive textiles. It runs for 120 minutes (in addition to normal program run time).

CHILD LOCK

To activate Child Lock, press and hold the Dryness Level Button and Program Selection Button simultaneously for at least 3 seconds. The Child Lock icon will be illuminated. No buttons will be active while Child Lock is in effect. Press and hold the Dryness Level Button and Program Selection Buttons for at least 3 seconds to disable Child Lock.

Program Information Table

Program Name	Weight (Max.)	Dryness Level
Recommended for items made of cotton or linen		
Cotton	7.0 kg	Extra
Cotton	7.0 / 3.5 kg	Standard
Cotton	7.0 kg	Less
1Hr	0.5 / 1.0 kg	————
Recommended for items made of a mixture of textiles (eg. cotton, synthetic, etc.)		
Mix	7.0 / 3.5 kg	Extra
Mix	7.0 / 3.5 kg	Standard
Recommended for items made of synthetic textiles		
Synthetic	3.5 kg	Extra
Synthetic	3.5 kg	Standard

Please Note: The table above is intended as a guide only and results may vary. TECO are not liable for incorrect use of this appliance. Please read and follow washing/drying instructions attached to each item before placing in the dryer.

CLEANING & MAINTENANCE



- Always disconnect the clothes dryer from the mains power source before performing any maintenance or cleaning of the appliance.
- For optimal performance, regular maintenance and cleaning is highly recommended.
- Regular maintenance and cleaning will extend the service life of the clothes dryer.

Cleaning the outer surface (cabinet)

To clean the cabinet and control panel, use a damp cloth, then wipe dry.

NOTE: Cleansers such as soap powder, abrasive cleaning powder, alkali cleansers, chemical cloth, thinners, alcohol, acid petroleum products and hot water should not be used to clean the dryer as they may damage the painted cover and plastics.




To avoid any kind of damage to the cabinet finish, use a small amount of liquid dish washing detergent with cold or luke warm water to wipe the dryer cabinet as required.

If any fluid is spilt on the cabinet, wipe the cabinet immediately.

Leave the door open after completing a cycle to allow the inside of the drum to dry, cool and prevent odours from forming.

Cleaning the lint filter

Clean the lint filter by opening the dryer door and removing the lint filter. Gently lift the filter to remove. Gently clean using running water and remove all accumulated dirt, dust, fluff and debris. Allow to dry before replacing. This should be done after each wash.

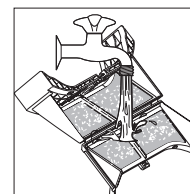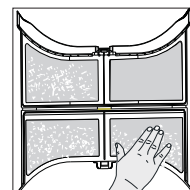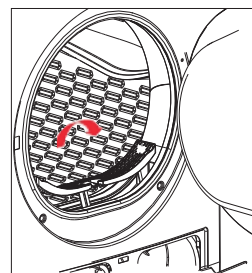

Check the points below after maintenance:

- Is there any damage to the power lead?
- Can the power plug be inserted into the power socket correctly?
- Is the power plug and/or lead heating up?
- Do the filters need cleaning?

TROUBLESHOOTING

If the clothes dryer does not perform as expected or malfunctions, please check the following list of possible solutions. If a solution can not be found or the problem persists, please contact TECO service (refer to **Page 11**). Do not, under any circumstance, dismantle the appliance.

FAULT	POSSIBLE SOLUTION
No lights are illuminated.	<ul style="list-style-type: none">• Check the selected program.• Check the power cord is securely connected.• Check the house fuse or circuit breaker.
The dryer will not start.	<ul style="list-style-type: none">• Check the door is closed securely.• Check a program has been selected.• Press the Start/Pause button.
Door opens or will not remain closed	<ul style="list-style-type: none">• Check the door is securely closed and seals.• Do not overload the dryer, remove items.
Excessive humidity	<ul style="list-style-type: none">• Check the room is sufficiently ventilated.• Check air grills are clean and not obstructed.• Check the lint filter is clean.
Items still damp or drying time excessive	<ul style="list-style-type: none">• Clean the lint filter.• Check the correct program has been selected.

Safety Cut Off and Reset Button


- This dryer is fitted with a safety cut off system which is activated by excessive heat.
- Wait at least 10 minutes for the dryer to cool before pressing the safety reset button.
- The safety reset button is located on the rear of the dryer.

It will only be necessary to press the safety reset button if the dryer is not heating or the safety cut off system has been triggered.

- Press and hold the white reset button in until the reset click is heard.

The safety cut off may be triggered for the following reasons:

1. Lint filter is blocked. The most common reason for the dryer overheating is a blocked lint filter. Clean the lint filter after each load to prevent this from occurring.
2. Exhaust outlets obstructed.
3. Insufficient ventilation for the dryer to operate safely.
4. Garment obstructing the filter.

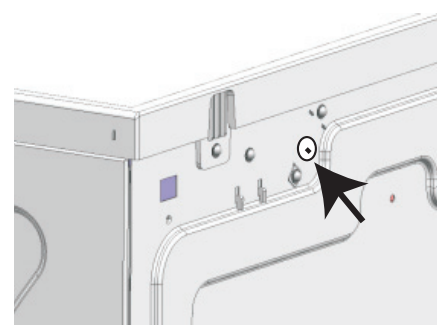

REPAIRS, SERVICE & WARRANTY

It is hazardous for anyone installing, removing, altering, repairing, servicing, or testing this appliance. Doing so may cause injury or damage to the appliance.

Only an Authorised Service Person can carry out servicing or repairs to this appliance.

IF SERVICE IS REQUIRED

If you have a problem, and the problem persists after you have made the checks mentioned in the Troubleshooting section (page 10) of this manual, contact:

TECO Australia Service on 1300 660 037 (9am to 4pm AEST Mon to Fri)
For warranty details please visit www.teco.com.au

Complete and retain the following information:

Name of retailer: _____

Date of purchase: _____

Model No. : _____

Serial No. : _____

MFG code: _____

Please retain proof of purchase for warranty claims.

SPECIFICATIONS

Model	TCD70ASAMDBF	
Rated Input Power (W)	2000	
Classification of Use	Indoor use only	
Rated Total Gross Volume (Kg)	7.0	
Voltage (V)	220~240	
Frequency (Hz)	50	
Motor Output Power (W)	200	
Dimensions (mm)	Height	840
	Width	595
	Depth	550
Net Weight (Kg)	33	
IP rating	IPX4	

NOTE: This product is subject to continuous improvement, specifications are subject to change without prior notice. Please refer to rating plate attached to the appliance for full specifications.

This product was tested in accordance with AS/NZS 2442.2 using Extra Dryness Level and Cotton program.



www.teco.com.au

EBF-PV2