



Protection from key theft.

Two-Point Keypad Immobiliser

The IM007 immobiliser provides protection against key theft, requiring the driver to enter an additional keycode. The unit automatically arms itself whenever the vehicle is turned off, and features valet mode for hassle-free lending.

Add an additional layer of security

If the unique 4-digit code is not entered correctly up to 15 seconds before ignition, the vehicle will not be functional. To deter code guessing, the keypad locks for one minute after 3 incorrect attempts.



Automatic arming

The immobiliser can be armed either manually or automatically, arming the vehicle 30 seconds after the vehicle is turned off. With automatic arming, you'll never forget to immobilise your vehicle.


Valet mode

Valet mode temporarily prevents the system from auto-arming, allowing others to drive the vehicle without the need to enter the PIN. If the vehicle is driven for over 15 minutes while in valet mode, the PIN will need to be entered again once it stops. This function is ideal when leaving the vehicle with valet parking or mechanical service.



2 Point Immobilisation

This unit is a 2-point immobiliser, meaning relays can cut off both the starter motor and fuel pump, providing a two-pronged method of vehicle immobilisation.

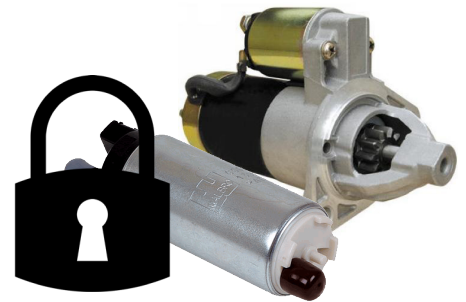

Wiring Diagram

Refer to manual for installation and usage instructions.

